





*NEXT SELECTION > VLAN - PC*

When this Option appears no change is necessary, press the center button on the Navigation Button. This will take you to the next option.



*NEXT SELECTION > 802.1x*

When this Option appears no change is necessary, press the center button on the Navigation Button. This will take you to the next option.



*NEXT SELECTION > ENTER SYSTEM IP*

This option is a critical entry item. Dial the IP address provided to you by your IT specialist. The "\*" key is used as the dot. So it would look something like XXX.XXX.XXX.XXX.

Press the center button on the Navigation Button. This will take you to the next option.



*NEXT SELECTION > ENTER SYSTEM ID*

This option is a critical entry item. Enter the extension number of your phone.

Press the center button on the Navigation Button. This will take you to the next option.



## NEXT SELECTION > ENTER PASSWORD


When this Option appears enter the password provided by your IT Administrator. Press the center button on the Navigation Button.



*This will cause the phone to reboot.*

When your phone reboots it should have the proper extension number on the display. Should it not come up in the display contact your IT Administrator as they live for the opportunity to serve you.

## SMT-i5210 LAYOUT

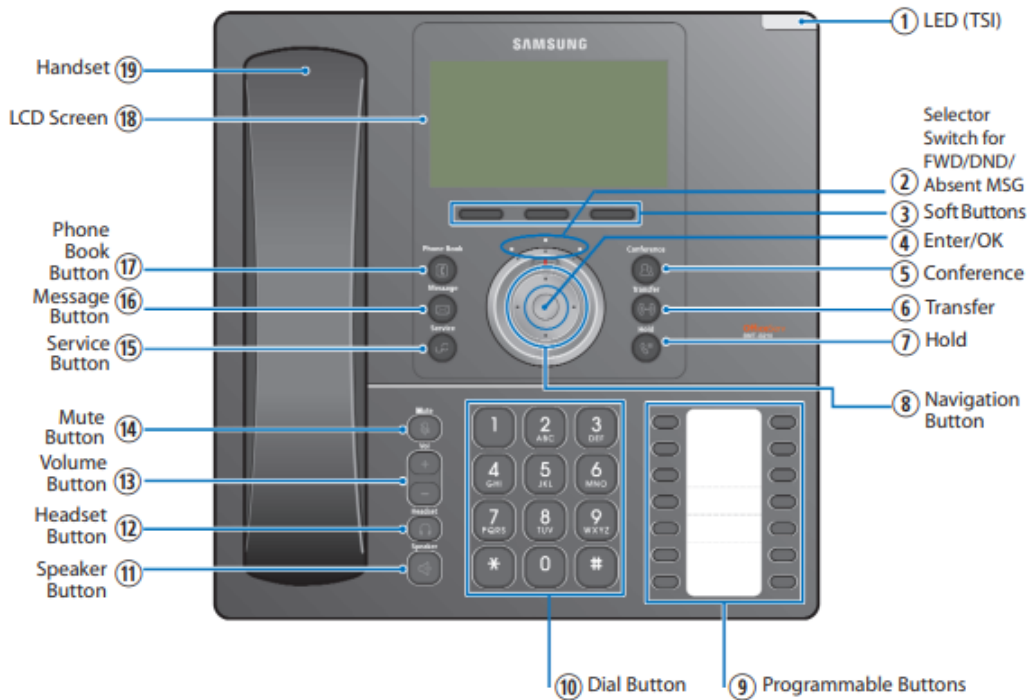

**NOTE:** The words "key" and "button" are interchangeable.